




## ASSEMBLY TEMPLATE PanConnect:mini

1. Confirm product to be installed
2. Measure assembly and template
3. After checking, drill holes  $\varnothing 2$

Print this  
template  
at 100%

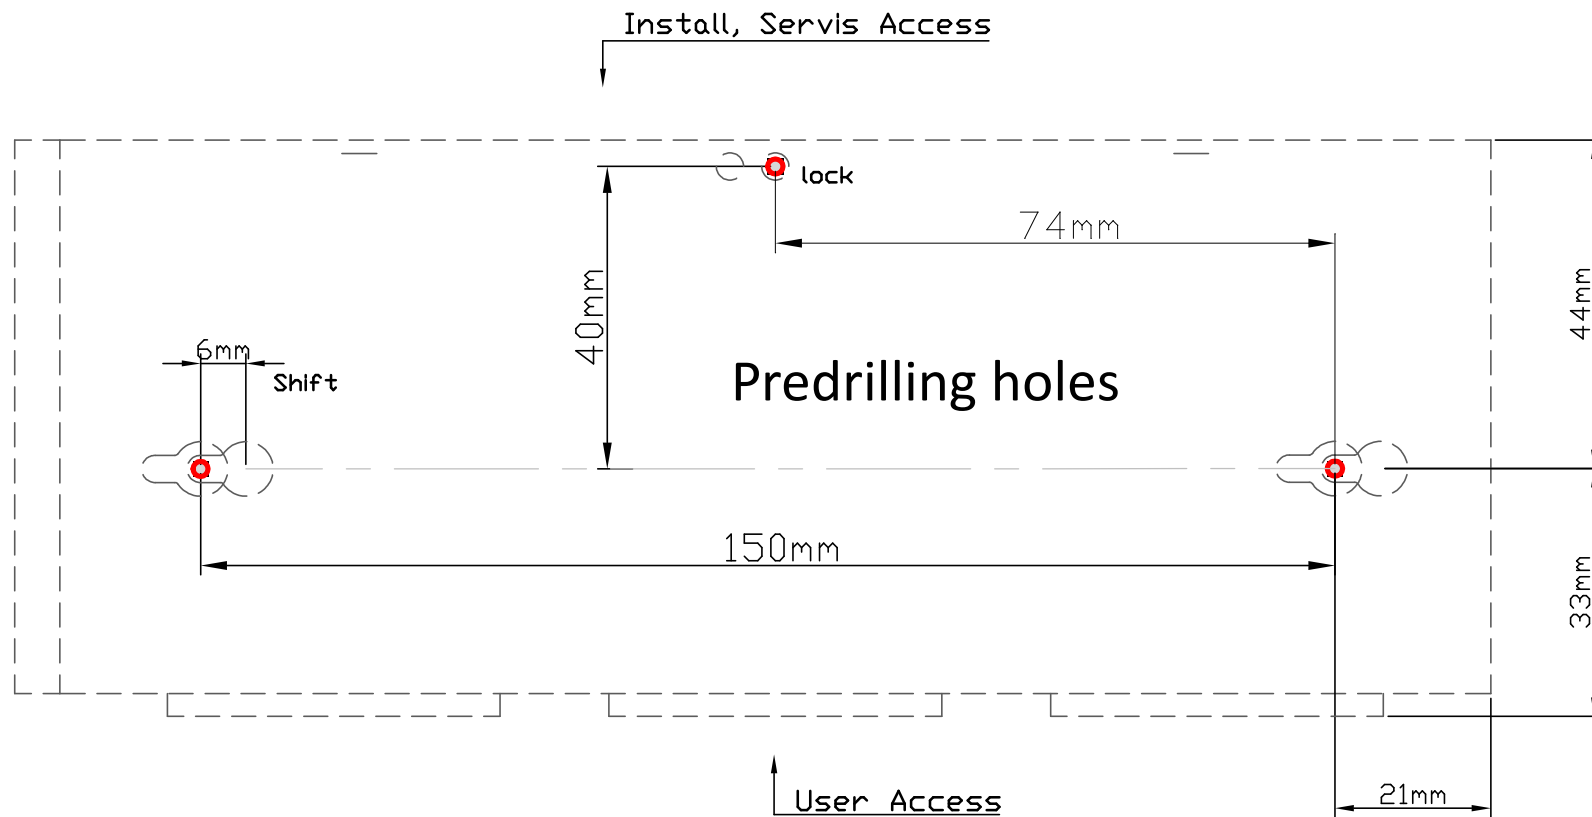

Scale 1:1  
Format A4